SCH-B379

Mobile Phone
user manual

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

www.samsungmobile.com

Printed in China
Code No.:GH68-31854A
English (IND). 10/2010. Rev. 1.1

SAMSUNG

Safety precautions

To prevent injury to yourself and others or damage to your device, read all of the following information before using your device.

Warning: Prevent electric shock, fire, and explosions

Do not use damaged power cords or plugs, or loose electrical sockets

Do not touch the power cord with wet hands, or disconnect the charger by pulling on the cord

Do not bend or damage the power cord

Do not use your device while charging or touch your device with wet hands

Do not short-circuit the charger or the battery

Do not drop or cause an impact to the charger or the battery

Do not charge the battery with chargers that are not approved by the manufacturer

Do not use your device during a thunderstorm

Your device may malfunction and your risk of electric shock is increased.

Do not handle a damaged or leaking Lithium Ion (Li-Ion) battery

For safe disposal of your Li-Ion batteries, contact your nearest authorised service centre.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your device. Incompatible batteries and chargers can cause serious injuries or damage to your device.
- Never dispose of batteries or devices in a fire. Follow all local regulations when disposing of used batteries or devices.
- Never place batteries or devices on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Protect the device, batteries, and chargers from damage

- Avoid exposing your device and batteries to very cold or very hot temperatures.
- Extreme temperatures can cause the deformation of the device and reduce the charging capacity and life of your device and batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and – terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Caution: Follow all safety warnings and regulations when using your device in restricted areas

Turn off your device where prohibited

Comply with all regulations that restrict the use of a mobile device in a particular area.

Do not use your device near other electronic devices

Most electronic devices use radio frequency signals. Your device may interfere with other electronic devices.

Do not use your device near a pacemaker

- Avoid using your device within a 15 cm range of a pacemaker if possible, as your device can interfere with the pacemaker.
- If you must use your device, keep at least 15 cm away from the pacemaker.
- To minimise the possible interference with a pacemaker, use your device on the opposite side of your body from the pacemaker.

Do not use your device in a hospital or near medical equipment that can be interfered with by radio frequency

If you personally use any medical equipment, contact the manufacturer of the equipment to ensure the safety of your equipment from radio frequency.

If you are using a hearing aid, contact the manufacturer for information about radio interference

Some hearing aids may be interfered with by the radio frequency of your device. Contact the manufacturer to ensure the safety of your hearing aid.

Turn off the device in potentially explosive environments

- Turn off your device in potentially explosive environments instead of removing the battery.
- Always comply with regulations, instructions and signs in potentially explosive environments.
- Do not use your device at refuelling points (service stations), near fuels or chemicals, and at blasting areas.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories.

Turn off your device when in an aircraft

Using your device in an aircraft is illegal. Your device may interfere with the electronic navigation instruments of the aircraft.

Electronic devices in a motor vehicle may malfunction due to the radio frequency of your device

Electronic devices in your car may malfunction due to radio frequency of your device. Contact the manufacturer for more information.

Comply with all safety warnings and regulations regarding mobile device usage while operating a vehicle

While driving, safely operating the vehicle is your first responsibility. Never use your mobile device while driving, if it is prohibited by law. For your safety and the safety of others, practice good common sense and remember the following tips:

- Use a hands-free device.
- Get to know your device and its convenience features, such as speed dial and redial. These features help you reduce the time needed to place or receive calls on your mobile device.
- Position your device within easy reach. Be able to access your wireless device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, let your voice mail answer it for you.
- Let the person you are speaking with know you are driving. Suspend calls in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice, and heavy traffic can be hazardous.
- Do not take notes or look up phone numbers. Jotting down a “to do” list or flipping through your address book takes attention away from your primary responsibility of driving safely.
- Dial sensibly and assess the traffic. Place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call, dial only a few numbers, check the road and your mirrors, then continue.
- Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
- Use your device to call for help. Dial a local emergency number in the case of fire, traffic accident, or medical emergencies.
- Use your device to help others in emergencies. If you see an auto accident, a crime in progress, or a serious emergency where lives are in danger, call a local emergency number.
- Call roadside assistance or a special, non-emergency assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or another special, non-emergency number.

Proper care and use of your mobile device

Keep your device dry

- Humidity and all types of liquids may damage device parts or electronic circuits.
- When wet, remove the battery without turning on your device. Dry your device with a towel and take it to a service centre.
- Liquids will change the colour of the label that indicates water damage inside the device. Water damage to your device can void your manufacturer’s warranty.

Do not use or store your device in dusty, dirty areas

Dust can cause your device to malfunction.

Do not store your device on slopes

If your device falls, it can be damaged.

Do not store your device in hot or cold areas. Use your device at -20 °C to 50 °C

- Your device can explode if left inside a closed vehicle, as the inside temperature can reach up to 80 °C.
- Do not expose your device to direct sunlight for extended periods of time (such as on the dashboard of a car).
- Store the battery at 0 °C to 40 °C.

Do not store your device with such metal objects as coins, keys and necklaces

- Your device may become deformed or malfunction.
- If the battery terminals are in contact with metal objects, it may cause a fire.

Do not store your device near magnetic fields

- Your device may malfunction or the battery may discharge from exposure to magnetic fields.
- Magnetic stripe cards, including credit cards, phone cards, passbooks, and boarding passes, may be damaged by magnetic fields.
- Do not use carrying cases or accessories with magnetic closures or allow your device to come in contact with magnetic fields for extended periods of time.

Do not store your device near or in heaters, microwaves, hot cooking equipment, or high pressure containers

- The battery may leak.
- Your device may overheat and cause a fire.

Do not drop your device or cause impacts to your device

- The screen of your device may be damaged.
- If bent or deformed, your device may be damaged or parts may malfunction.

Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purposes.

Use manufacturer-approved batteries, chargers, accessories and supplies

- Using generic batteries or chargers may shorten the life of your device or cause the device to malfunction.
- Samsung cannot be responsible for the user’s safety when using accessories or supplies that are not approved by Samsung.

Do not bite or suck on the device or the battery

- Doing so may damage the device or cause explosion.
- If children use the device, make sure that they use the device properly.

When speaking on the device:

- Hold the device upright, as you would with a traditional phone.
- Speak directly into the mouthpiece.
- Avoid contact with your device’s internal antenna. Touching the antenna may reduce the call quality or cause the device to transmit more radio frequency than necessary.

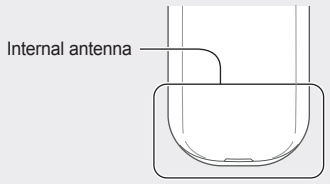

- Hold the device with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.
- Excessive exposure to loud sounds can cause hearing damage.
- Exposure to loud sounds while driving may distract your attention and cause an accident.
- Always turn the volume down before plugging the earphones into an audio source and use only the minimum volume setting necessary to hear your conversation or music.

Use caution when using the device while walking or moving

Always be aware of your surroundings to avoid injury to yourself or others.

Do not carry your device in your back pockets or around your waist

You can be injured or damage the device if you fall.

Do not disassemble, modify, or repair your device

- Any changes or modifications to your device can void your manufacturer’s warranty. For service, take your device to a Samsung Service Centre.
- Do not disassemble or puncture the battery, as this can cause explosion or fire.

Do not paint your device

Paint can clog moving parts and prevent proper operation. If you are allergic to the paint or metal parts of the device, stop using the device and consult your physician.

When cleaning your device:

- Wipe your device or charger with a towel or a rubber.
- Clean the terminals of the battery with a cotton ball or a towel.
- Do not use chemicals or detergents.

Do not use the device if the screen is cracked or broken

Broken glass or acrylic could cause injury to your hands and face. Take the device to a Samsung Service Centre to have it repaired.

Do not use the device for anything other than its intended use

Avoid disturbing others when using the device in public

Do not allow children to use your device

Your device is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the device, or make calls that increase your charges.

Install mobile devices and equipment with caution

- Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted.
- Avoid placing your device and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Allow only qualified personnel to service your device

Allowing unqualified personnel to service your device may result in damage to your device and will void your manufacturer’s warranty.

Handle UIM cards with care

- Do not remove a card while the device is transferring or accessing information, as this could result in loss of data and/or damage to the card or device.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

Ensure access to emergency services

Emergency calls from your device may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

Specific Absorption Rate (SAR) certification information

Your phone conforms to U.S. Federal Communications Commission (FCC) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile phone that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 1.6 W/kg.

In normal use, the actual SAR is likely to be much lower, as the phone has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your phone reduces your overall exposure to RF energy.

The FCC has granted an Equipment Authorization for this model phone based on the compliance of all reported SAR levels with the FCC RF exposure guidelines. The authorisation can be found on the FCC Office of Engineering and Technology website at http://www.fcc.gov/oet/ea.

Phone layout

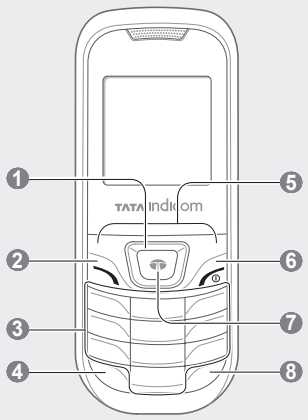

1 **4-way navigation key**
Scroll through menu options; In Idle mode, access user-defined menus

2 **Dial key**
Make or answer a call; In Idle mode, retrieve recently dialled, missed, or received numbers

3 **Alphanumeric keys**

4 **Lock key**
In Idle mode, lock or unlock the keypad (press and hold)

5 **Softkeys**
Perform actions indicated at the bottom of the display

6 **Power/Menu exit key**
Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode

7 **Confirm key**
In Idle mode, access Air services; In Menu mode, select the highlighted menu option or confirm an input

8 **Silent profile key**
In Idle mode, activate or deactivate the silent profile (press and hold)

Your phone displays the following status indicators on the top of the screen:

Icon	Description
	Signal strength
	Call in progress
	SOS message feature activated
	Roaming
	Alarm activated
	New text message
	New voice mail message
	Normal profile activated
	Silent profile activated
	Battery power level

Install the UIM card and battery

1. Remove the back cover and insert the UIM card.

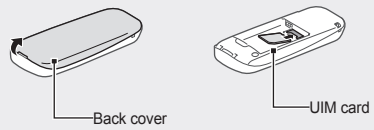

2. Insert the battery and replace the back cover.

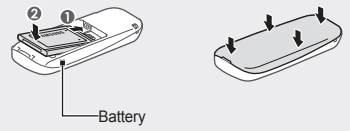

Charge the battery

1. Plug the supplied travel adapter.
2. When charging is finished, unplug the travel adapter.

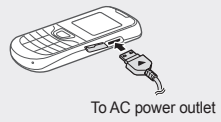

Do not remove the battery from the phone before unplugging the travel adapter first. Otherwise, the phone may be damaged.

Instructional icons

	Note: notes, usage tips, or additional information
→	**Followed by**: the order of options or menus you must select to perform a step; for example: In Menu mode, select **Messages** → **Create message** (represents **Messages**, followed by **Create message**)
[ ]	**Square brackets**: phone keys; for example: [ ] (represents the Power/Menu exit key)
< >	**Angled brackets**: softkeys that control different functions at each screen; for example: <**OK**> (represents the **OK** softkey)

Turn your phone on or off

To turn your phone on,

1. Press and hold [ ].
2. Enter your PIN and press <**OK**> (if necessary).

To turn your phone off, repeat step 1 above.

Access menus

To access your phone's menus,

1. In Idle mode, press <**Menu**> to access Menu mode.
2. Use the Navigation key to scroll to a menu or option.
3. Press <**Select**>, <**OK**>, or [ ] to confirm the highlighted option.

4. Press <**Back**> to move up one level; Press [ ] to return to Idle mode.

- Samsung is not responsible for any loss of password or private information or other damages caused by illegal software.
- When you access **Security**, you will be prompted to enter your password and press <**OK**>.

Make a call

1. In Idle mode, enter an area code and a phone number.
2. Press [ ] to dial the number.
3. To end the call, press [ ].

Answer a call

1. When a call comes in, press [ ].
2. To end the call, press [ ].

Adjust the volume

To adjust the volume of the ringtone

1. In Menu mode, select **Settings** → **Profiles**.
2. Scroll to the phone profile you are using.

If you are using the silent or offline profile, you are not allowed to adjust the volume of the ringtone.

3. Press <**Options**> → **Edit**.
4. Select **Volume** → **Call alert**.
5. Scroll left or right to adjust the volume level.
6. Press <**Save**>.

To adjust the volume of voice during a call

While a call is in progress, press the Navigation key up or down to adjust the volume.

In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

Change your ringtone

1. In Menu mode, select **Settings** → **Profiles**.
2. Scroll to the profile you are using.

If you are using the silent or offline profile, you are not allowed to change the ringtone.

3. Press <**Options**> → **Edit** → **Call ringtone**.
4. Select a ringtone category → a ringtone.

Change the language of the phone to Hindi

1. In Menu mode, select **Settings** → **Phone** → **Language**.
2. Select **Hindi**.

Enter text

To change the text input mode

- Press and hold [#] to switch between Hindi and T9Hindi modes or between Abc and T9Abc modes.
- Press [#] to change case in Abc and T9Abc modes or switch to Number mode.
- Press [*] to switch to Symbol mode.
- Press and hold [*] to select an input mode or change the input language.

Hindi or Abc mode

Press an appropriate alphanumeric key until the character you want appears on the display.

T9Hindi or T9Abc mode

1. Press appropriate alphanumeric keys to enter an entire word.
2. When the word displays correctly, press [**0**] to insert a space. If the correct word does not display, press the Navigation key up or down to select an alternate word.

Number mode

Press an appropriate alphanumeric key to enter a number.

Symbol mode

Press an appropriate alphanumeric key to enter a symbol.

- To move the cursor, press the Navigation key.
- To delete characters one by one, press <**Clear**>. To delete the characters on the left side of the cursor, press and hold <**Clear**>.
- To insert a space between characters, press [**0**].
- To enter punctuation marks, press [**1**].

Add a new contact

1. In Idle mode, enter a phone number and press <**Options**>.
2. Select **Create contact** → a memory location (phone or UIM).
3. Select a number type (if necessary).
4. Enter contact information.
5. Press [ ] to add the contact to memory.

Send and view messages

To send a text message

1. In Menu mode, select **Messages** → **Create message**.
2. Enter a recipient number and scroll down.
3. Enter your message text. ▶ *Enter text*
4. Press [ ] to send the message.

To view text messages

1. In Menu mode, select **Messages** → **Inbox**.
2. Select a text message.

Activate the mobile tracker

When someone inserts a new UIM card in your phone, the mobile tracker feature will automatically send the contact number to two recipients to help you locate and recover your phone.

To activate the mobile tracker

1. In Menu mode, select **Settings** → **Security**.
2. Enter your phone password (4 digits) and press <**OK**>.
3. Select **Mobile tracker** → **Settings**.
4. Enter a new 8-digit password for the mobile tracker and press [ ].
5. Enter the new password again and press [ ].
6. Scroll left or right to **On**.
7. Scroll down and press [ ] to open the recipient list.
8. Press <**Options**> → **Phonebook** to open your contact list.
9. Select a contact.
10. Select a number (if necessary).
11. Press <**Options**> → **Save** to save the recipients.
12. Scroll down and enter the sender's name.
13. Press <**Options**> → **Save** to open the agreement page.
14. Press <**Accept**>.

To change the password for the mobile tracker, select **Change password**.

To access a remote phone

If a remote phone has the mobile tracker feature and it is activated, you can get contacts, delete data, and get location information of the remote phone. You can also lock or unlock the remote phone and set it to divert all the incoming calls to a specified phone.

To get contacts of the remote phone,

1. In Menu mode, select **Settings** → **Security**.
2. Enter your phone password (4 digits) and press <**OK**>.
3. Select **Mobile tracker** → **Access remote phone**.
4. Enter the phone number of the remote phone and scroll down.
5. Enter the mobile tracker password of the remote phone and press <**OK**>.
6. Select **Get Contact**.
7. Enter the name of the contact you want to retrieve and press [ ].
   Your phone will receive a text message with the contact information.

To delete data on the remote phone,

1. In Menu mode, select **Settings** → **Security**.
2. Enter your phone password (4 digits) and press <**OK**>.
3. Select **Mobile tracker** → **Access remote phone**.
4. Enter the phone number of the remote phone and scroll down.
5. Enter the mobile tracker password of the remote phone and press <**OK**>.
6. Select **Delete User Data**.
7. Press <**Yes**>.
   A call log list, Phonebook contacts, and all messages of the remote phone will be deleted.

To set call diverting on the remote phone,

1. In Menu mode, select **Settings** → **Security**.
2. Enter your phone password (4 digits) and press <**OK**>.
3. Select **Mobile tracker** → **Access remote phone**.
4. Enter the phone number of the remote phone and scroll down.
5. Enter the mobile tracker password of the remote phone and press <**OK**>.
6. Select **Set call diverting**.
7. Enter the phone number of the diverted phone and <**Options**> → **Activate**.

To get location information,

1. In Menu mode, select **Settings** → **Security**.
2. Enter your phone password (4 digits) and press <**OK**>.
3. Select **Mobile tracker** → **Access remote phone**.
4. Enter the phone number of the remote phone and scroll down.
5. Enter the mobile tracker password of the remote phone and press <**OK**>.
6. Select **Get Location Information**.
   You will receive a text message with the remote phone's location information.

Activate and send an SOS message

In an emergency, you can send SOS messages to your family or friends for help.

To activate the SOS message

1. In Menu mode, select **Messages** → **Settings** → **SOS messages** → **Sending options**.
2. Scroll left or right to **On**.
3. Scroll down and press [ ] to open the recipient list.
4. Press <**Options**> → **Add recipients** → **Contacts list** to open your contact list.
5. Select a contact.
6. Select a number (if necessary).
7. When you are finished selecting contacts, press [ ] to save the recipients.
8. Scroll down and set the number of times to repeat the SOS message.
9. Press <**Save**> → <**Yes**>.

To send an SOS message

1. With the keys locked, press [ ] four times to send an SOS message to preset numbers.
   The phone switches to SOS mode and sends the preset SOS message.
2. To exit SOS mode, press [ ].

Use TATA Zone

To use the Tata Zone service

You can use this service to download various kinds of ringtones, wallpapers, or games offered by your service provider. In Menu mode, select **Tata Zone** → **T World** or **Tata Apps Store**.

To use the SMS Service

You can use a variety of additional services offered by your service provider. This menu is available only when you use a UTK UIM card that provides additional services. In Menu mode, select **Tata Zone** → **SMS Services**.

Use New PC Studio

With the New PC Studio, you can send messages or manage your schedules and contacts. Access www.in.samsungmobile.com to download New PC Studio.

Listen to the FM radio

1. Plug the supplied headset into the phone.
2. In Menu mode, select **FM radio**.
3. Press [ ] to start the FM radio.
4. Scroll left or right to find a radio station.
5. To turn off the FM radio, press [ ] again.

Set and use alarms

To set a new alarm

1. In Menu mode, select **Organiser** → **Alarms**.
2. Select an empty alarm location.
3. Set alarm details.
4. Press <**Save**>, or press <**Options**> → **Save**.

To stop an alarm

When the alarm sounds,

- Press <**OK**> to stop an alarm.
- Press <**Snooze**> to silence the alarm for the snooze period.

To deactivate an alarm

1. In Menu mode, select **Organiser** → **Alarms**.
2. Select the alarm you want to deactivate.
3. Scroll left or right to **Off**.
4. Press <**Save**>.